


ML395/ML3410/PM3410 series Maintenance Combination list

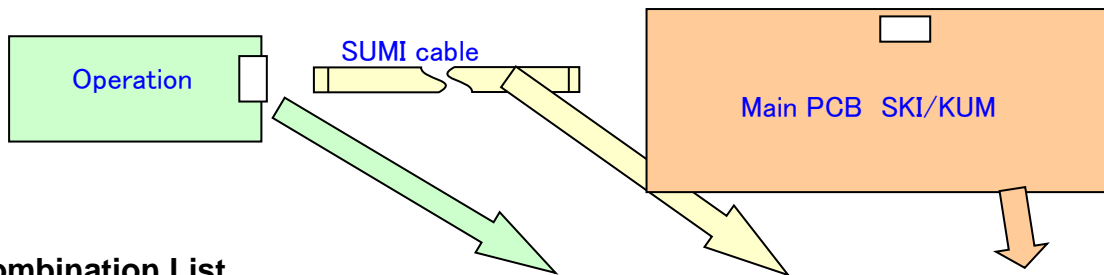

Combination List


No.	Machine type	Case	Terminal Thickness	Pow connector AMP or JST	User	Unit Revision	Operation panel		SUMI cable		Main PCB	
							Parts Name	Parts Number	Parts Name	Parts Number	Parts Name	Parts Number
1	ML395B	Old maintenance	0.5mm	AMP	ODA	A	TFOP-PCB Assy	YA4050-3106G001	SMCD-16*110-AD	LP-5466-37	SKI-PCB Assy	40900502
2					OEL	A						40900510
3					INT	A						40900506
4				JST	ODA	A						40900514
5					OEL	A						40900522
6					INT	A						40900518
7		New maintenance	0.3mm	AMP	ODA	B		42303101	SMCD-16X110-ADX10(BL)	2381026 P0007		40900525
8					OEL	B						40900529
9					INT	B						40900527
10				JST	ODA	B						40900531
11					OEL	B						40900535
12					INT	B						40900533
13	ML395C	Old maintenance	0.5mm	AMP	ODA	A	TFOP-PCB Assy	YA4050-3106G001	SMCD-16*110-AD	LP-5466-37	SKI-PCB Assy	40900504
14					OEL	A						40900512
15					INT	A						40900508
16				JST	ODA	A						40900516
17					OEL	A						40900524
18					INT	A						40900520
19		New maintenance	0.3mm	AMP	ODA	B		42303101	SMCD-16X110-ADX10(BL)	2381026 P0007		40900526
20					OEL	B						40900530
21					INT	B						40900528
22				JST	ODA	B						40900532
23					OEL	B						40900536
24					INT	B						40900534
25	PM3410 ML3410	Old maintenance	0.5mm	AMP	ODA	A	OPML-PCB Assy	YA4042-1511G001	SMCD-16*110-AD	LP-5466-36	KUM-PCB Assy	40900402
26					ADP	A						40900402
27					R&R	A						40900402
28					OEL	A						40900408
29					INT	A						40900404
30				JST	ODA	A						40900411
31					ADP	A						40900411
32					R&R	A						40900411
33					OEL	A						40900415
34					INT	A						40900413
35		New maintenance	0.3mm	AMP	ODA	B		42303201	SMCD-6X100-ADX10(BL)	2381026 P0002		40900417
36					ADP	B						40900417
37					R&R	B						40900417
38					OEL	B						40900419
39					INT	B						40900418
40				JST	ODA	B						40900420
41					ADP	B						40900420
42					R&R	B						40900420
43					OEL	B						40900422
44					INT	B						40900421

Noet : Red parts number it new drawing

Point of view of new part and old part


1) Printer Out side (Printing of Label)

【Example】




Terminal Thickness 0.5mm type

2 05 A 1234567

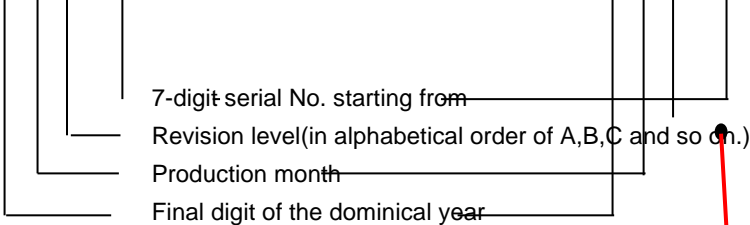

Mark accompaniment be correspondence 0.3 mm

【Example】

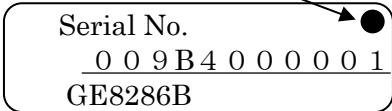

Terminal Thickness 0.3mm type


2 06 B 4000001

(The number of the head is 4.)

2) Printer Out side (Printing of Label)


CAUTION

Use parts only with caution label in yellow to Control board, Carriage cable,

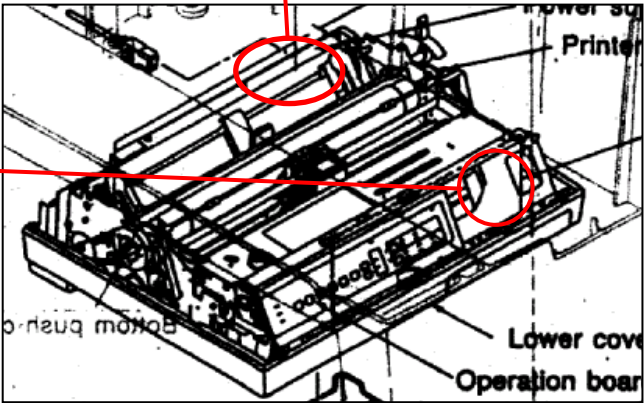


Terminal Thickness 0.3mm type

1) Main PCB

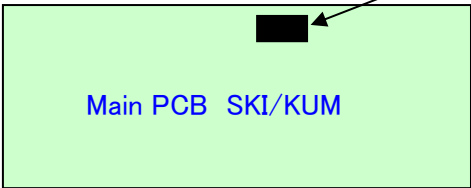

Terminal Thickness 0.5mm


Color of the connector the point

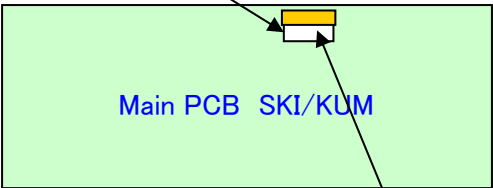

Terminal Thickness 0.3mm

CAUTION For use only in Rev B~

2) Operator panel

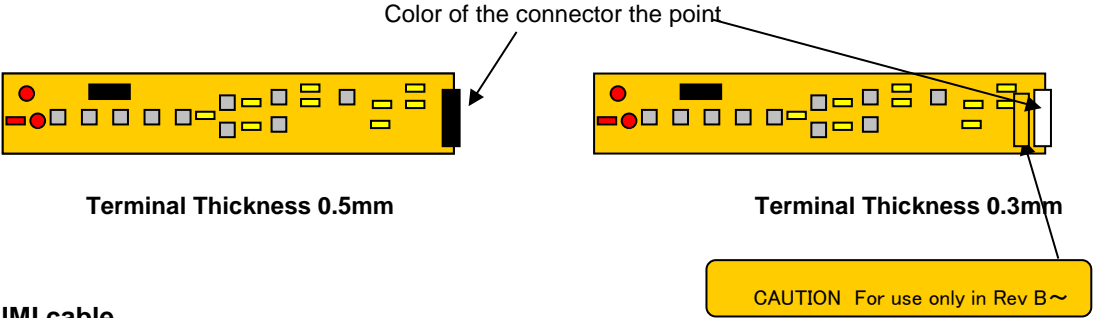

3) SUMI cable

